



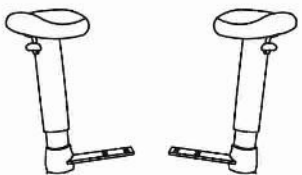

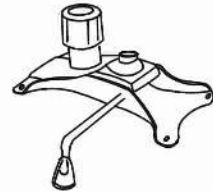



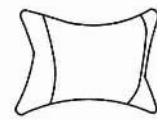









# NÁVOD NA MONTÁŽ KA-V606

<b>Ax1</b> 	<b>Bx5</b> 	<b>Cx1</b> 	<b>Dx1</b> 		
<b>Ex2</b> 	<b>Fx1</b> 	<b>Gx1</b> 	<b>Hx1</b> 		
<b>Ix1</b>  <b>IL</b> <b>IR</b>	<b>Jx1</b>  <b>JL</b> <b>JR</b>	<b>Kx1</b> 	<b>Lx1</b> 		
<b>Mx12</b> <b>M8*20mm</b> 	<b>Nx4</b> <b>M8*30mm</b> 	<b>Rx4</b> <b>M5*12mm</b> 	<b>Ox16</b> 	<b>Px1</b> 	<b>Qx4</b> 

# NÁVOD NA MONTÁŽ KA-V606

