


20 MIN

2 X




(D) AUFBAUANLEITUNG  
 (NL) HANDLEIDING VOOR DE MONTAGE  
 (TR) MONTAJ TALIMATI  
 (RO) INSTRUCTIUNI DE ASAMBLARE  
 (F) INSTRUCTION D'ASSEMBLAGE  
 (CZ) POKYNY K MONTÁŽI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
 (PL) INSTRUKCJA MONTAŻU  
 (RU) Инструкция по монтажу  
 (I) PROCEDURA DI ASSEMBLAGGIO  
 (SK) POKYNY K MONTÁŽI  
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
 (SLO) NAVODILA ZA MONTAŽO  
 (S) MONTERINGSANVISNING  
 (LT) DIEGIMO INSTRUKCIJOS  
 (E) INSTRUCCIONES DE MONTAJE

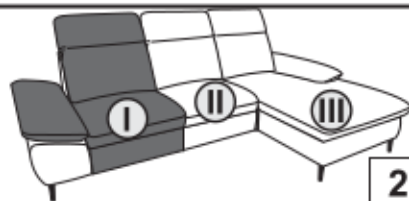


REC-2RFE

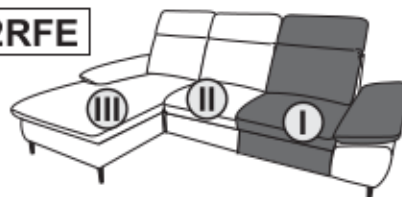








1/4

2RFE-REC



hardware bag/sachet materiel/zubehörbeutel/sachetti materiale/bolsa de materiales/worek materialowy

pre-assembled/ pre assemble/ vormontiert/ premontato/ wstępnie/ zamontowane

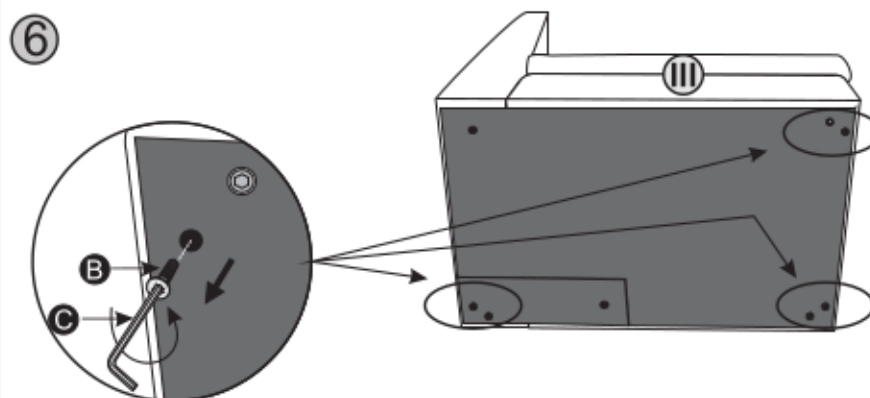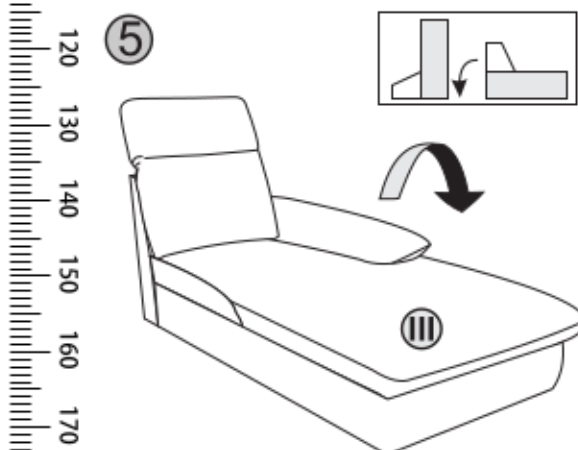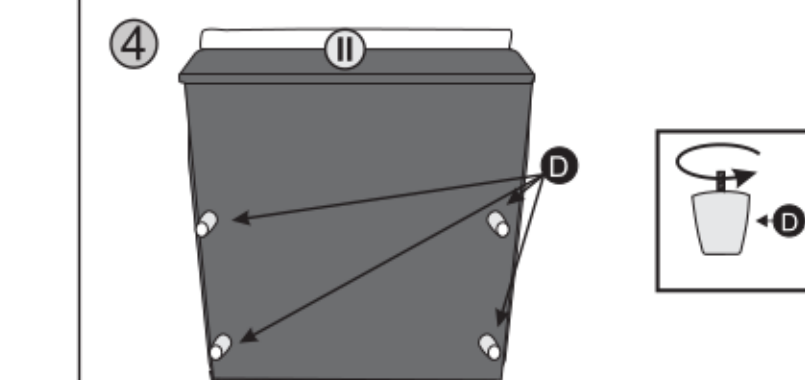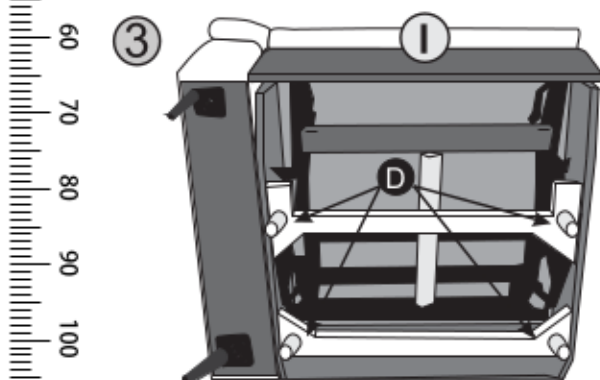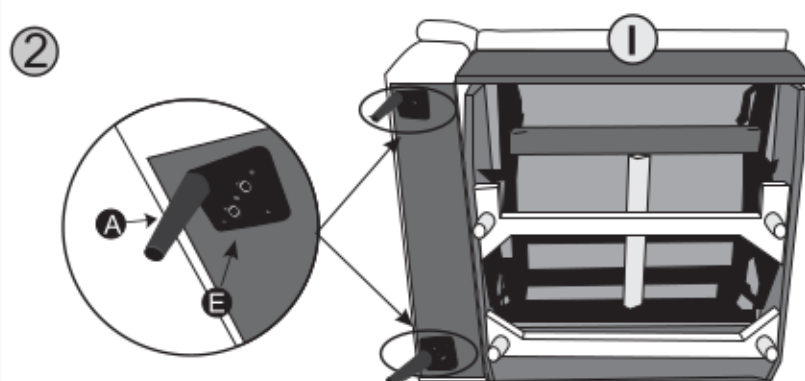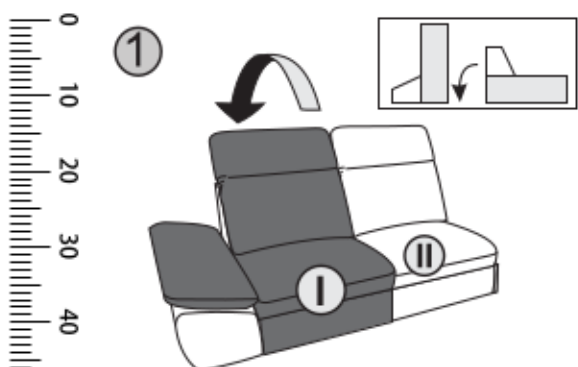LE TRI  
+ FACILE


20 MIN

2 X




(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

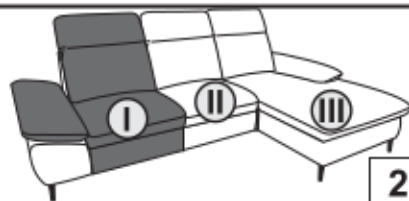


2RFE-REC

REC-2RFE



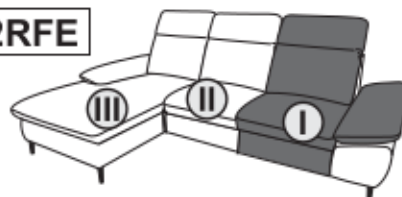


2/4



hardware bag/sachet matériel/zubehörbeutel/sachetti materiale/bolsa de materiales/worek materialowy

pre-assembled/ pre assemble/ vormontiert/ premontato/ wstępnie zamontowane

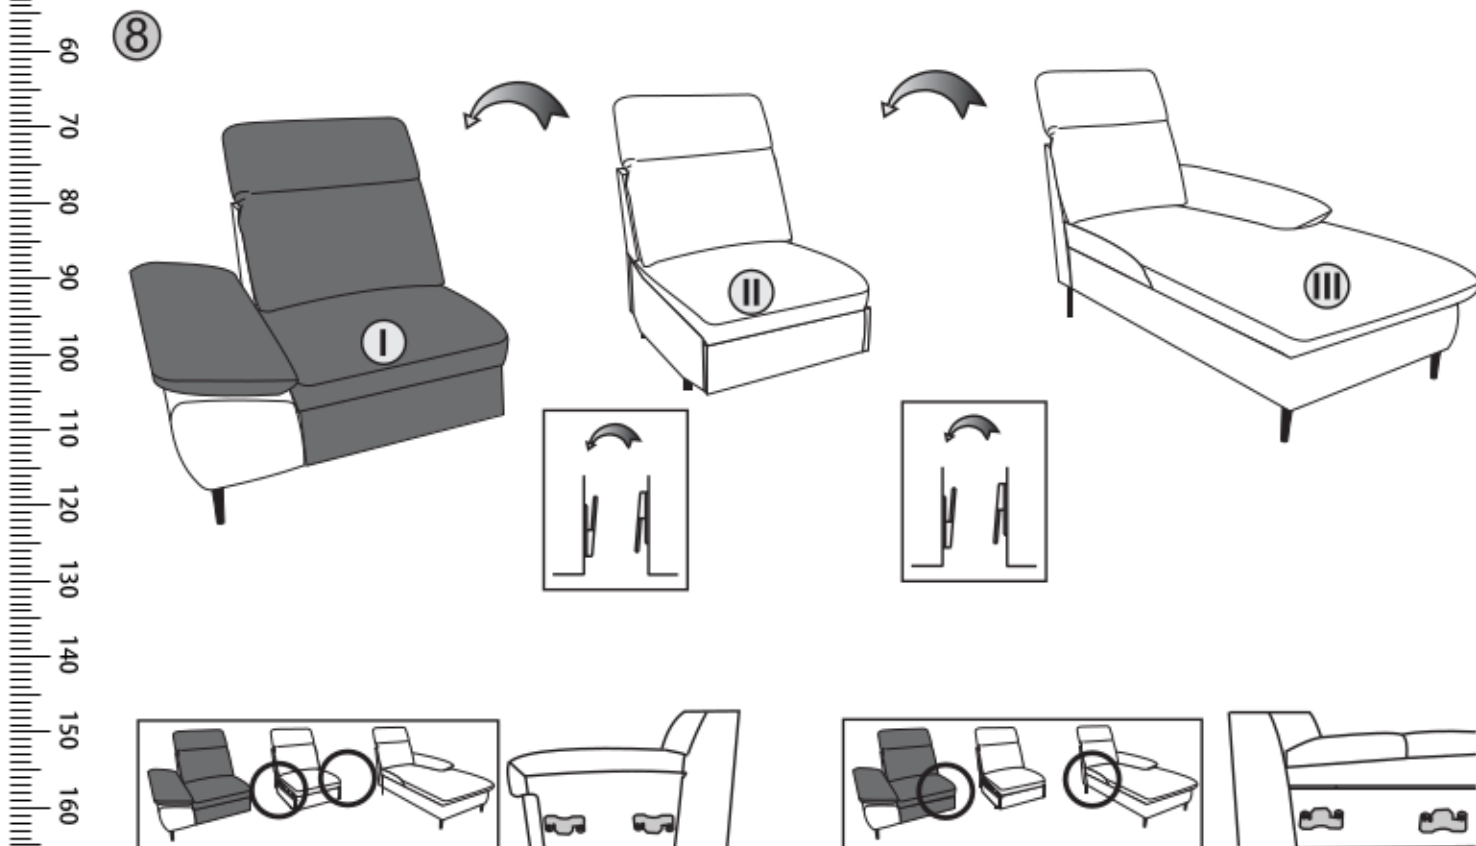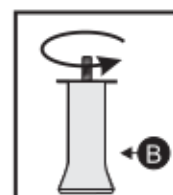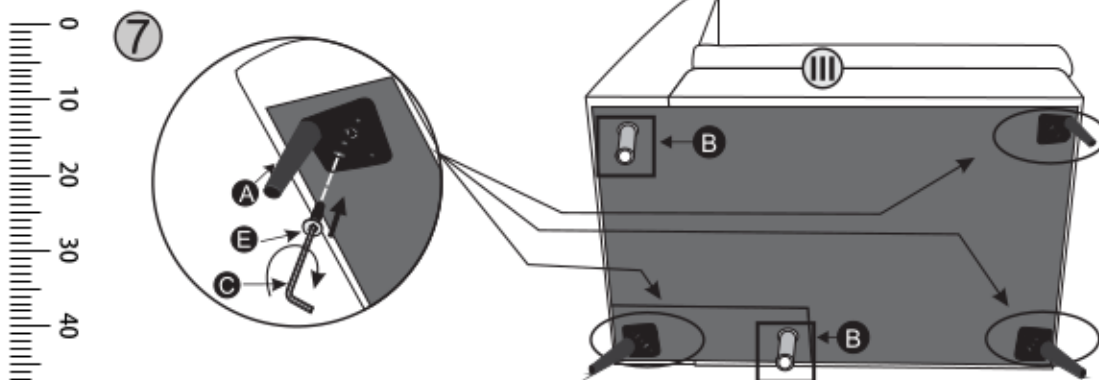LE TRI  
+ FACILE


20 MIN

2 X




(D) AUFBAUANLEITUNG  
 (NL) HANDLEIDING VOOR DE MONTAGE  
 (TR) MONTAJ TALIMATI  
 (RO) INSTRUCTIUNI DE ASAMBLARE  
 (F) INSTRUCTION D'ASSEMBLAGE  
 (CZ) POKYNY K MONTÁŽI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
 (PL) INSTRUKCJA MONTAŻU  
 (RU) Инструкция по монтажу  
 (I) PROCEDURA DI ASSEMBLAGGIO  
 (SK) POKYNY K MONTÁŽI  
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
 (SLO) NAVODILA ZA MONTAŽO  
 (S) MONTERINGSANVISNING  
 (LT) DIEGIMO INSTRUKCIJOS  
 (E) INSTRUCCIONES DE MONTAJE

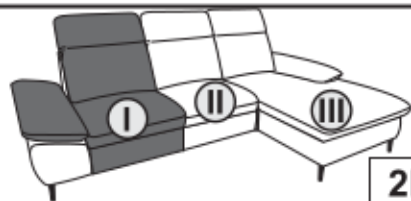

2RFE-REC


REC-2RFE

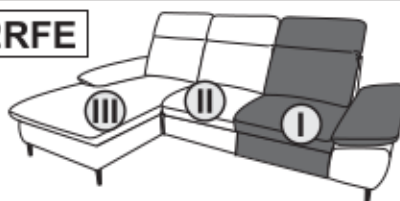

3/4

9

1/3

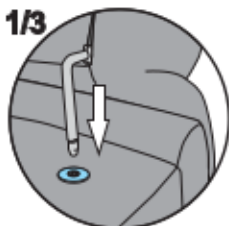


2/3



3/3



click!!!

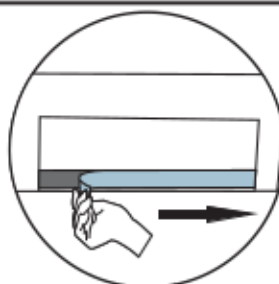

10

1/3




click!!!

2/3



3/3

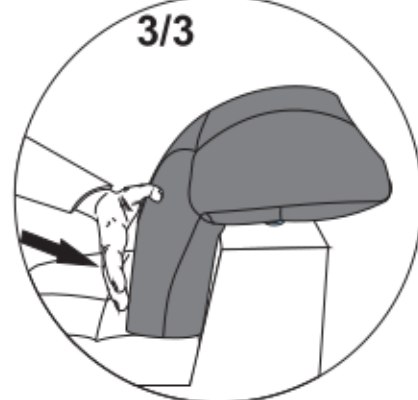LE TRI  
+ FACILEBAC  
DE TRI


20 MIN

2 X




- (D) AUFBAUANLEITUNG
- (NL) HANDLEIDING VOOR DE MONTAGE
- (TR) MONTAJ TALIMATI
- (RO) INSTRUCTIUNI DE ASAMBLARE
- (F) INSTRUCTION D'ASSEMBLAGE
- (CZ) POKYNY K MONTÁŽI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR) UPUTSTVA ZA MONTAŽU

- (GB) ASSEMBLY INSTRUCTIONS
- (PL) INSTRUKCJA MONTAŻU
- (RU) Инструкция по монтажу
- (I) PROCEDURA DI ASSEMBLAGGIO
- (SK) POKYNY K MONTÁŽI
- (HU) ÖSSZESZERELÉSI ÚTMUTATÓ
- (SLO) NAVODILA ZA MONTAŽO
- (S) MONTERINGSANVISNING
- (LT) DIEGIMO INSTRUKCIJOS
- (E) INSTRUCCIONES DE MONTAJE

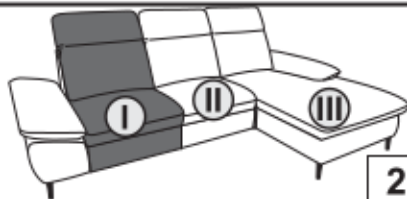

2RFE-REC

REC-2RFE

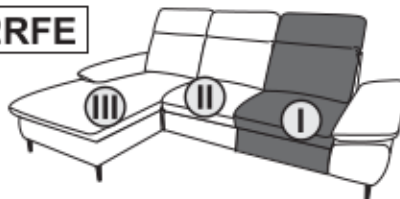


4/4

11







220V/230V

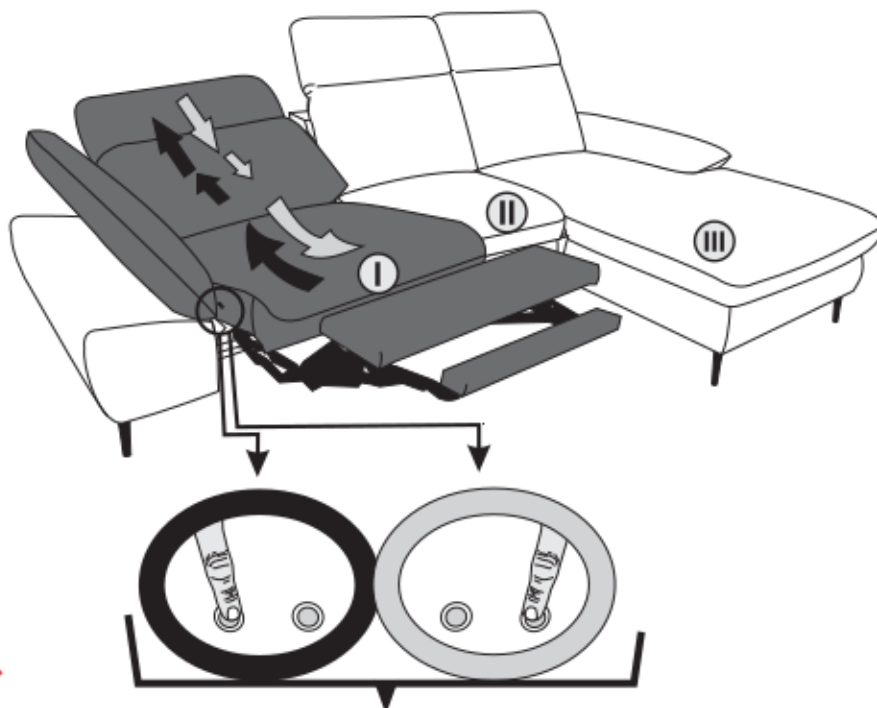

ON MAX 2min. → OFF 18min. → ON MAX 2min. → ...

12

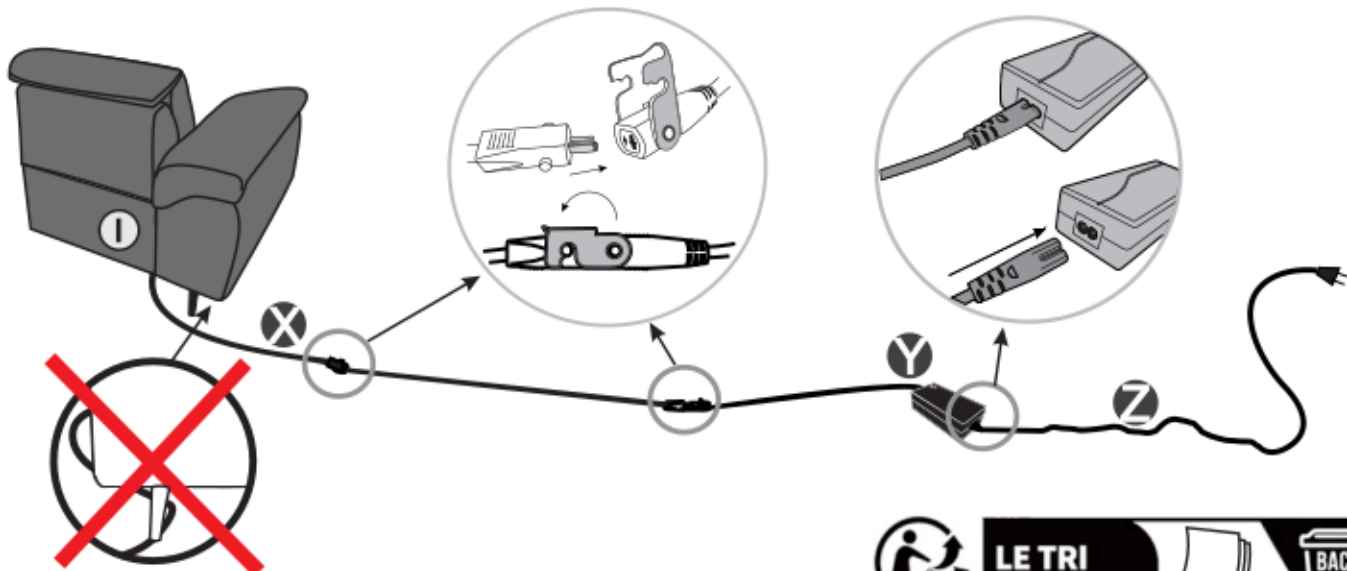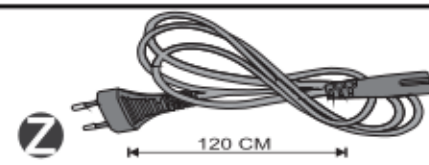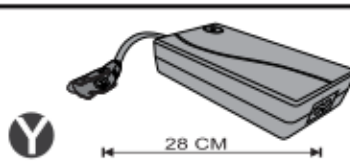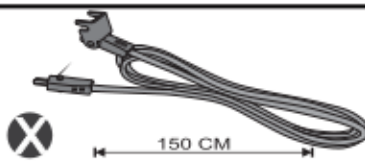

LE TRI FACILE



BAC DE TRI